

TRACKMAN

# QUICK START GUIDE



TRACKMAN

# 1

# WELCOME TO TRACKMAN

Congratulations on the purchase of your TrackMan 4.

This guide shows you what your TrackMan can do, helps you set it up, and gets you up and running with tips for the software and apps you'll use every day.


Your battery is charged and ready to go, so you can start using your TrackMan right out of the box.

# 2

## WHAT'S IN THE BOX





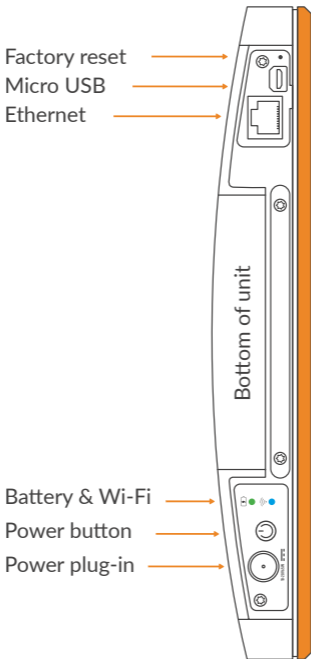



- 1 TrackMan 4 dual radar
- 1 Power supply with cable
- 1 Micro USB cable
- 1 USB key with software
- 1 sheet of indoor spin markers


# 3


 
# 4

## BATTERY INDICATOR

Charged	
Charging	
Not charging	
Full	
75%	
50%	
25%	
Low	

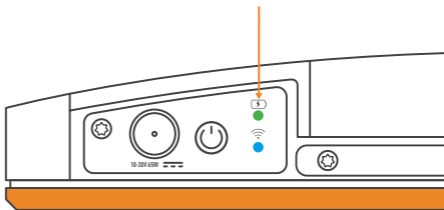

# 5

## STATUS INDICATOR

Off	
Armed	
Error	
Booting	
Updating	



# 6

## INSTALL SOFTWARE

### iOS

The TrackMan Golf app is available in the App Store for iPhone and iPad.

### WINDOWS


The TrackMan Performance Studio (TPS) software can be installed by using the enclosed USB key or downloaded from the Support section on [trackman.com/golf](http://trackman.com/golf)

# 7

## TURN THE POWER ON

Pull out the rear, flat leg until it clicks. The two front legs extend automatically.

Once the legs are extended, the radar is turned on. The radar then levels itself and is ready for use.

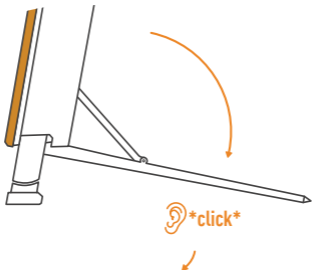




# 8

## TURN THE POWER OFF

- ① Pull the rear leg slightly *farther* down until you hear the clicking sound again.
- ② Now push it back up. The two front legs retract automatically.

When the three legs are fully retracted the radar is off.

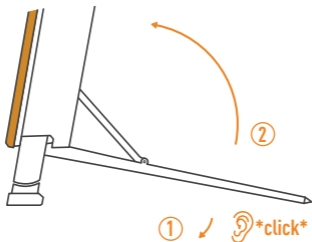


# 9

## MANUALLY CLOSE LEGS

If the radar should run out of battery, you can manually close the legs:


- On the rear side, slide the button left to manually close the rear leg. The front legs will retract automatically.

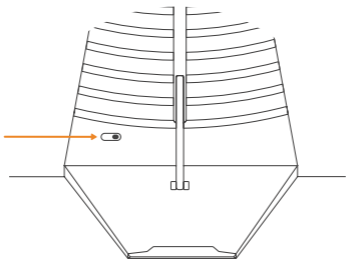

# 10

## OUTDOOR POSITIONING

Place the radar 7-10 ft (2-3 m) behind the ball, with the orange front pointing towards the target.

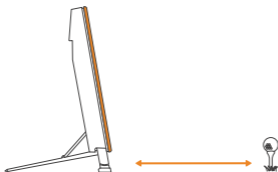


7-10 ft (2-3 m)

# 11

## INDOOR POSITIONING

When playing indoors, the ball should have at least 10 ft (3 m) of flight.

For drives with higher ball speed, up to 4 meters is recommended.

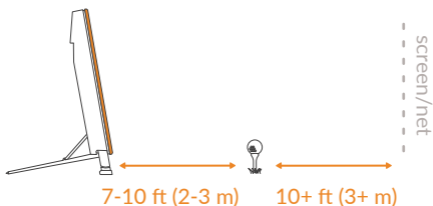


# 12

## CONNECT TO PC OR iOS DEVICE

Connect to the TrackMan Wi-Fi by selecting the network that contains the serial number of your unit.

Default password is: **password**

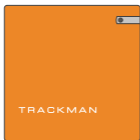

# 13

## GETTING STARTED

- Connect to the Radar with PC or iOS Wi-Fi. Select your radar on the available Wi-Fi connections (its default name is your serial number).
- Start TPS (PC) or TrackMan app (iOS)
- Click Shot Analysis (PC) or Start (iOS)
- Select Target
- Select Player
- Select Club. For custom clubs, select Club Type


That's it. Your TrackMan is ready.

# 14

## USING INDOOR SPIN MARKERS

The enclosed spin markers are used for more accurate measurements of ball spin when playing indoors.

- Place 1 marker on the ball.
- For an iron, place the ball with the marker pointing directly at the target.
- For a driver, place the ball with the marker pointing upwards.

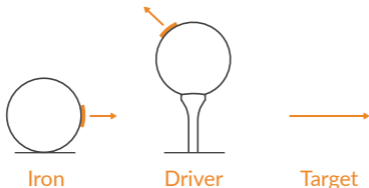

# TIPS & TRICKS



# 16

## TRACKMAN CAMERA APP

Get all the angles! You can use iOS devices (iPhones, iPads, iPod Touch) as external cameras.

The TrackMan Camera app allows up to 6 cameras to record simultaneously.

The recorded video is automatically trimmed and imported into the TrackMan software.

Download the app in the App Store.

# 17

## CONNECT CAMERA APP

- Download the TrackMan Camera app from the App Store
- Enter iOS Settings > Wi-Fi > Select your radar (its default name is your serial number).
- Open the TrackMan Camera app
- Click “Connect to radar”
- Place iOS device at desired recording angle
- You are ready to go

Watch the tutorial on how to connect iOS cameras under the Support section on [trackman.com/golf](http://trackman.com/golf)

# 18

## EXTERNAL CAMERAS

A number of 3rd party cameras can be used as external cameras with your TrackMan.

A full list of compatible cameras can be found under the Support section at [trackman.com/golf](http://trackman.com/golf)

# 19

## CHANGE Wi-Fi DEVICE NAME

- Connect to the Radar with PC or iOS Wi-Fi. Select your radar on the available Wi-Fi connections (its default name is your serial number).
- Open a web browser and type: **172.30.20.1** in the address bar.
- Click on Login (no password needed)
- Go to Setup
- Under System, set your device name
- Click Apply
- Under wireless, set your device name in the SSID field
- Click Apply
- Reconnect to the radar with the new name in the Wi-Fi list

# 20

## MEDIA KIT & BRANDING

Promote your business or yourself. High resolution images of the TrackMan 4 and other promotional material can be downloaded for free on our website. This includes Rollup banners, posters, and TrackMan logos.

Go to Media Kit in the Explore section on [trackman.com/golf](http://trackman.com/golf)

# 21

## FREQUENTLY ASKED QUESTIONS

Have a question or two? We have collected a list of the most common questions under the Support section on [trackman.com/golf](http://trackman.com/golf)

You can also contact our support team for help (see next card).

# 22

## HELP FROM A SPECIALIST

Our global support team is available to help you with any questions you may have.

### Phone

+1 (810) 225-9855 (Americas)

+45 4574 4742 (Europe & Asia)

### Email

[support@trackman.com](mailto:support@trackman.com)

TRACKMAN

DUAL RADAR

