

OPTIMIZE LOADING TIME FOR IDS CAMERAS

AVAILABLE FOR TPS 6.4 (and newer)

Requirements

- TPS 6.4
- IDS Camera Manager

1. Open the IDS Camera Manager and select the appropriate camera
2. Select the wrench tool and choose camera
3. Set the pixel clock to approx. 50% of the max value
4. Click the format fan and set the dot in RGB24 under Hardware normal. Notice that this option is only available when pixel clock is low enough (max half value)
5. Make your custom adjustments to the image for desired colors and resolution, trying to keep the exposure rate below 0.6 to ensure a sharp shaft for the impact frame

Feel free to contact support@trackman.com for assistance with setting up your IDS cameras.

